RTV5 Starter Disable Wiring Instructions

Locate The Starter Wire Off The Vehicle's Ignition Column

Cut The Starter Wire

On The Supplied Relay:

Red Wire - Keyside Of Cut Starter Wire

Blue Wire - Tp The Starter Side Of The Cut Starter Wire

White Wire - Connect To Orange Wire Of The RTV5

Black Wire - To 12 VDC Constant

The Yellow Wire Is Not Used.
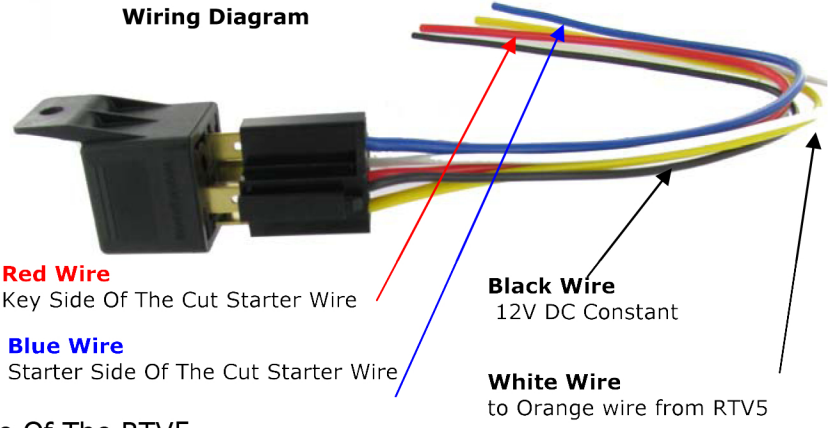
Wiring Diagram